

ioLogik E1200 Series Quick Installation Guide

Ethernet Remote I/O

Version 6.1, January 2021

Technical Support Contact Information
www.moxa.com/support

MOXA[®]

© 2021 Moxa Inc. All rights reserved.

P/N: 1802012001016



Package Checklist

- 1 ioLogik E1200 series remote I/O product
- Quick installation guide (printed)


Specifications

Input Current	ioLogik E1210 Series: 110 mA @ 24 VDC ioLogik E1211 Series: 200 mA @ 24 VDC ioLogik E1212 Series: 155 mA @ 24 VDC ioLogik E1213 Series: 130 mA @ 24 VDC ioLogik E1214 Series: 188 mA @ 24 VDC ioLogik E1240 Series: 121 mA @ 24 VDC ioLogik E1241 Series: 194 mA @ 24 VDC ioLogik E1242 Series: 139 mA @ 24 VDC ioLogik E1260 Series: 110 mA @ 24 VDC ioLogik E1262 Series: 118 mA @ 24 VDC
Input Voltage	12 to 36 VDC
Operating Temperature	Standard Models: -10 to 60°C (14 to 140°F) Wide Temp. Models: -40 to 75°C (-40 to 167°F)
Storage Temperature	-40 to 85°C (-40 to 185°F)

Installation

Jumper Settings


Models with DIO, AI, or external power channels require configuring the jumpers inside the enclosure. Remove the screw located on the back panel and open the cover to configure the jumpers.



DI Mode

DO Mode


DIO mode configurations are shown above (Default: DO Mode).



Voltage Mode Current Mode

Analog mode configurations are shown above (Default: Voltage Mode).

DOs on the ioLogik E1213 have 3 possible external (EXT) power configurations, which are shown to the right. Only one field power can be selected at a time (JP10 / 12V JP5 / 9V JP11) and the jumper must be inserted vertically, not horizontally (Default: Field Power JP10).

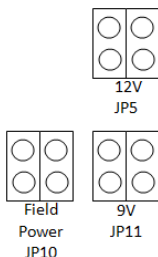

12V
JP5

Field
Power
JP10


9V
JP11

NOTE The ioLogik E1213 has 4 pure DO channels and 4 hybrid DIO channels. For the 4 pure DO channels, you can use the jumpers to select the power configuration output (i.e., field power, 12 V, 9 V). But for the 4 hybrid DIO channels, you cannot use the jumpers to select the power configuration output. Instead, you can only use the jumpers to set the DIO channels to either DI mode or DO mode.


I/O Wiring

Digital Inputs/Outputs


DI Dry Contact




DI Wet Contact

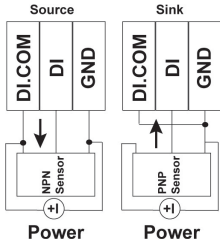

DO (Sink)




DO (Source)




Analog Inputs/Outputs

Voltage/
Current

0-10V 4-20 mA

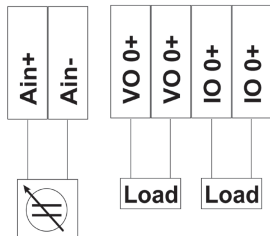


Relay Output (Form A)




RTD Inputs


2-Wire RTD

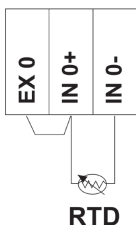

3-Wire RTD

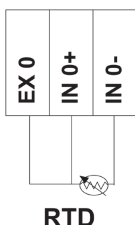

TC Inputs

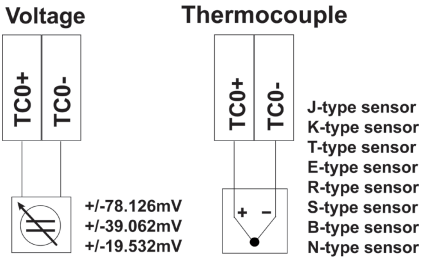


NOTE A “load” in a circuit schematic is a component or portion of the circuit that consumes electric power. For the diagrams shown in this document, “load” refers to the devices or systems connected to the remote I/O unit.


Mounting

There are two sliders on the back of the unit for DIN rail and wall mounting.

1. **Mounting on a DIN rail:** Pull out the bottom slider; latch the unit onto the DIN-rail, and push the slider back in.
2. **Mounting on the wall:** Pull out both the top and bottom sliders and align the screws accordingly.

Connecting the Power

Connect the +12 to +36 VDC power line to the ioLogik E1200’s terminal block V+ terminal; connect the ground from the power supply to the V- terminal. Connect the ground pin () if earth ground is available.

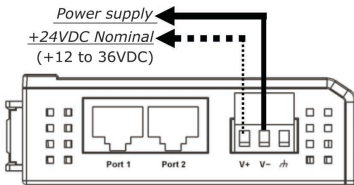

NOTE For safety reasons, wires connecting the power supply should be at least 2 mm in diameter (e.g., 12 gauge wires).

Connecting to the Network

The ioLogik E1200 has two built-in RJ45 Ethernet ports for connecting standard direct or cross-over Ethernet cables.

LED Indicators

Type	Color	Description
Power	Amber	System power is ON
	Off	System power is OFF
Ready	Green	System is ready
	Flashing	Flashes every 1 sec when the "Locate" function is triggered
	Flashing	Flashes every 0.5 sec when the firmware is being upgraded
	Flashing	An on/off period cycle: 0.5 second shows "Safe Mode"
	Off	System is not ready.
Port 1	Green	Ethernet connection enabled
	Flashing	Transmitting or receiving data
Port 2	Green	Ethernet connection enabled
	Flashing	Transmitting or receiving data
EXT (E1213 only)	Green	EXT field power input is connected
	Off	EXT field power input is disconnected

System Configuration

Configuration via Web Console

Main configuration of an ioLogik E1200 is by web console.

- Default IP Address: 192.168.127.254
- Subnet Mask: 255.255.255.0

NOTE Be sure to configure the host PC's IP address to the same subnet as the ioLogik E1200. For example, 192.168.127.253

ioSearch Utility

ioSearch is a search utility that helps users locate an ioLogik E1200 on the local network. The utility can be downloaded from Moxa's website.

Load Factory Default Settings

There are three ways to restore the ioLogik E1200 to factory default settings.

1. Hold the RESET button for 5 seconds.
2. In the ioSearch utility, right-click on the ioLogik device to be reset and select **Reset to Default**.
3. Select **Load Factory Default** from the web console.

NOTE Please refer to the user's manual for detailed configuration and settings information.


How to Download the Software

Step 1: Click on the following link to open the Support & Downloads search tool:

http://www.moxa.com/support/support_home.aspx?isSearchShow=1

Step 2: Type the model name in the search box or select a product from the drop down box and then click **Search**.

Support & Downloads

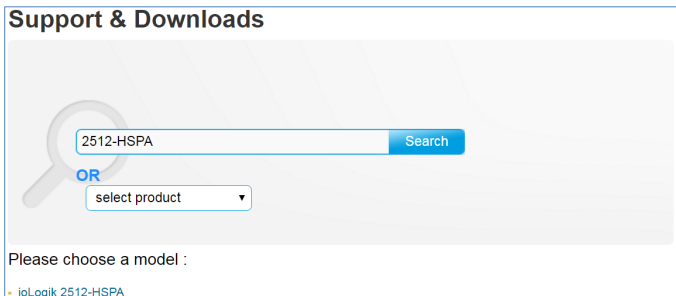

The image shows a search interface with a magnifying glass icon on the left. There is a text input field containing '2512-HSPA' and a blue 'Search' button to its right. Below the input field, the word 'OR' is displayed in blue. Underneath 'OR' is a dropdown menu with the text 'select product' and a downward arrow. Below the search area, the text 'Please choose a model :' is displayed. At the bottom left, there is a small blue link that says 'ioLogik 2512-HSPA'.

Step 3: Click the **Software Packages** link to download the latest software for the product.

ioLogik 2512-HSPA

Documentation <ul style="list-style-type: none">• Datasheets• Manuals	Software <ul style="list-style-type: none">• Firmware• Libraries• Software Packages• Utilities	Other <ul style="list-style-type: none">• Product Page
---	---	---

ATEX Information



1. Certificate number: DEMKO 13 ATEX 1210600X
2. Certification string: Ex nA nC IIC T3 Gc
3. Standards covered:
EN 60079-0:2012+A11:2013, EN 60079-15:2010
4. These products are to be installed in an ATEX Certified IP54 enclosure and accessible only by the use of a tool.
5. These products are for use in an area of not more than pollution degree 2 in accordance with IEC 60664-1.